



# Release and Installation Notes for Cisco Quality of Service Device Manager 1.1

---

**August 23, 2000**

These release and installation notes describe the benefits, system requirements, and installation instructions for Cisco Quality of Service Device Manager (QDM) 1.1.

QDM 1.1 operates on Cisco 7100, 7200, and VIP-enabled Cisco 7500 series routers running Cisco IOS Release 12.1(2)E and Release 12.1(2)E1.

All features and functionality in QDM 1.0 are also in QDM 1.1. QDM 1.1 contains fixes for some caveats that were in QDM 1.0, as well as support for new software features introduced in Cisco IOS Release 12.1(2)E.

For a list of the major software caveats that apply to QDM 1.1, see the “Caveats” section on page 15 of this document.

## Contents

These release notes describe the following topics:

- Introduction to QDM, page 2
- Benefits, page 2
- System Requirements, page 3
- Installation Instructions, page 6
- Caveats, page 15
- Related Documentation, page 16
- Limitations and Restrictions, page 16
- Obtaining Documentation, page 17
- Obtaining Technical Assistance, page 17



# Introduction to QDM

Cisco Quality of Service Device Manager (QDM) provides an easy-to-use application for configuring and monitoring advanced IP-based Quality of Service (QoS) functionality within Cisco routers. The QDM application is stored in the Flash memory of the Cisco 7000 family router and can be run from any workstation with proper support (as detailed in the “System Requirements” section of this document). QDM is a browser-based application that runs from Java. The QDM application uploads when the client web browser makes a connection to the embedded web server of the router.

Once the QDM application is uploaded, the online help embedded within the application is designed to make QDM an easy-to-use application. For information on using QDM, consult the online help within the QDM application.

## Benefits

### Simplified Configuration of Traffic Classes

Through the use of a classification wizard, traffic classification is simplified within QDM. QDM simplifies the following traffic classification scenarios:

- Traffic classification based on access control lists, MAC address, IP precedence values, IP differentiated services code point (DSCP) values, QoS group values, protocols, other traffic classes, input interfaces, MPLS, and other pre-defined traffic classification criteria.
- Traffic classification based on Layer 4 through Layer 7 protocol type and payload using Network-Based Application Recognition (NBAR). For example, HTTP traffic can be classified by URL string, MIME type, or host name.

### Packet Marking

QDM traffic classification supports packet marking using standards-based marking schemes, including user-defined IP precedence values, IP DSCP values, or QoS group markers.

### Simplified Configuration of QoS Enforcement Mechanisms

Once traffic classification has been established, QDM supports a broad range of QoS features that can be applied to each traffic class:

- Minimum bandwidth guarantees (class-based weighted fair queueing - CBWFQ)
- Ensuring low latency up to a rate threshold (low latency queueing - LLQ)
- Limiting maximum bandwidth used (traffic policing or traffic shaping)
- Congestion avoidance (weighted random early detection - WRED)
- Packet marking or coloring
- Sharing bandwidth fairly across flows (flow-based weighted fair queueing - FBWFQ)

## Monitoring QoS Mechanisms

QDM allows users to monitor real-time performance of QoS functionality through the router with the use of graphs and tables. With QDM graphs, users can monitor Quality of Service data by class, policy, or interface. QDM has the ability to display up to four graphs in one frame, and users can run multiple frames simultaneously. Each graph can monitor various statistics, including packet rates, bit rates, byte counts, packet counts, and protocol discovery. The monitoring table functionality of QDM allows users to monitor QoS functionality statistics on a real-time basis and can provide these statistics as often as every 10 seconds.

By default, QDM is able to graph and provide statistics (in a graph or table format) for all objects based on weighted averages. These graphs contain no history and start building when the graphs are launched.

To retrieve statistics for these graphs, use the QoS Metrics History feature. The QoS Metric History feature allows QDM users to retrieve statistics for the previous 5 days.

## System Requirements

This section describes the system requirements for QDM 1.1:

- Memory Requirements, page 3
- Hardware Supported, page 3
- Software Supported, page 4
- Operating System Support, page 4
- Web Browser Support, page 5
- Screen Size Requirement, page 5

## Memory Requirements

QDM 1.1 has the following memory requirements:

- 1.5 MB of available Flash memory on the router
- 64 MB of available RAM for the PC



Note

---

QDM 1.1 does not impose any incremental memory requirements on the router.

---

## Hardware Supported

Cisco Quality of Service Device Manager operates with the following platforms:

- Cisco 7100 series router
- Cisco 7200 series router
- Cisco 7500 series routers with a Versatile Interface Processor (VIP).

**Note**

---

On a Cisco 7500 series router, Quality of Service features can only run on a Versatile Interface Processor (VIP). To run QoS features on a VIP, you must configure Distributed Cisco Express Forwarding on all interfaces running QoS features.

---

## Software Supported

QDM 1.1 requires Cisco IOS Release 12.1(2)E or Cisco IOS Release 12.1(2)E1.

**Note**

---

Cisco Systems recommends having 16 available virtual terminal (vty) lines for QDM. QDM might not properly install or run on systems with less than 16 virtual terminal lines.

---

## Operating System Support

QDM 1.1 requires one of the following operating systems:

- Solaris versions 2.51 or 2.6
- Windows NT 4.0 workstation
- Windows 95 or Windows 98

**Note**

---

The Japanese language versions of the Windows 98, Windows NT 4.0 Workstation, and Solaris version 2.6 operating systems support QDM 1.1.

---

**Note**

---

QDM 1.1 might operate on a system running the Windows 2000 operating system. However, Cisco Systems has not tested QDM 1.1 on a system running Windows 2000 and can not guarantee support for systems running QDM in a Windows 2000 environment. Future versions of QDM will run in a Windows 2000 operating system.

---

## Web Browser Support

QDM 1.1 supports the following Web browsers:

- Netscape Navigator 4.5.1 or later
- Microsoft Internet Explorer 5.0 or later (Windows clients only)



**Note**

---

For the QDM 1.1 application, Microsoft Internet Explorer Web browsers generally provide better overall performance than Netscape Navigator Web browsers.

---



**Caution**

---

QDM can theoretically run on all web browsers that support Java, JavaScript, or DHTML. However, QDM has only been successfully tested on the supported web browsers listed in this section of the document. Therefore, Cisco Systems highly recommends that you use a supported web browser to run QDM.

Cisco Systems can not guarantee support for web browsers that have not been successfully tested for QDM web browser support.

---

## Screen Size Requirement

The screen size requirement for QDM 1.1 for the desktop area is 1024 by 768 pixels. If your system is configured at a different desktop area size, the QDM screen might not properly fit in the web browser. Because the QDM screen does not properly fit in the web browser, certain graphs might be unreadable and certain functions might be unusable.

# Installation Instructions

To install QDM, follow the instructions in the following sections:

- Upgrading From QDM 1.0 to QDM 1.1
- Upgrading From QDM 1.0 to QDM 1.1, page 6
- Enabling QDM, page 9
- Launching QDM, page 9
- Logging Out of QDM, page 11
- Choosing an Authentication Mode, page 12
- Creating a QDM User Profile, page 12
- Disabling QDM, page 14
- Deleting QDM, page 14

## Upgrading From QDM 1.0 to QDM 1.1

If you are installing QDM 1.1 on your system for the first time, proceed to the Installing QDM.

If you are upgrading from QDM 1.0 to QDM 1.1, simply follow the instructions below. QDM 1.1 will automatically replace QDM 1.0, and all of the saved information from QDM 1.0 will be available in QDM 1.1.

## Installing QDM

- 
- Step 1** If you are on a router console, login to the router and proceed to step 2. If you are not on a router console, telnet to the router.
- Step 2** Verify that a QDM-supported Cisco IOS release is running by issuing the **show version** command in EXEC mode:
- ```
Router> show version
```

The Cisco IOS releases that support QDM 1.1 are listed in the “Software Supported” section on page 4. If you are not running a supported Cisco IOS release, see the following URL:  
<http://www.cisco.com/kobayashi/sw-center/sw-ios.shtml>

To download a supported Cisco IOS release, click **Cisco IOS 12.1: Download Cisco IOS 12.1 Software**.

**Note**

---

Cisco Connection Online (CCO), including the provided Software Center URL, contains information regarding Cisco IOS Releases. Cisco Systems recommends you research IOS Releases on CCO before making a purchasing decision.

---

**Step 3** Switch to enable mode on the router:

```
Router> enable
Enter password: xxxxxx
Router#
```

Ensure that the router has 1.5 MB of free Flash memory in order to support QDM. The available flash memory can be in one of the following four flash file systems: slot0, slot1, disk0, or disk1. Use the **directory** command to verify the amount of free space on a Flash memory card.




---

**Note** In these particular installation notes, QDM is stored in slot 0. In instances where slot0 appears in the command-line interface, simply replace the slot0 text in the command with the correct flash file system location (either slot1, disk0, or disk1).

---

```
Router# directory slot0:
Directory of slot0:/

1 -rw-      448893  Jan 03 2000 18:06:17 file01.txt
2 -rw-      213273  Jan 03 2000 18:06:17 file02.txt
20578304 bytes total (19733404 bytes free)
```

If 1.5MB (1,572,864 bytes free) of free space is not available on any Flash file system, try one of the following methods to create more Flash file system memory:

- Switch to a new Flash memory card
- Squeeze the Flash file system

Squeezing the Flash memory card is useful when some files are marked for deletion. To squeeze the Flash file system, use the **squeeze** command in privileged mode:

```
Router# squeeze slot0:
All deleted files will be removed. Continue? [Enter]
Squeeze operation may take a while. Continue? [Enter]
Squeezing...

Squeeze of slot0 complete
```

- Reformat the Flash memory card

**Caution**


---

Reformatting the flash card will erase all existing files on that flash card.

---

To reformat the flash card, use the **format** command in privileged mode:

```
Router# format slot0:
Format operation may take a while. Continue? [Enter]
```




---

**Note** When you enter the `http://<IP address>/level/<security level>/go/qdm` URL, the HTTP server looks for QDM in the four Flash file systems in the following order: slot0, slot1, disk0, then disk1. This order becomes important when QDM is installed on two different Flash file systems. When a version of QDM exists on both slot1 and disk0, for instance, QDM will always be loaded from slot1, even if disk0 contains a newer version of QDM.

---

- Step 4** Type the following URL into your web-browser:  
<http://www.cisco.com/cgi-bin/tablebuild.pl/qdm>
- Step 5** Click the following file:  
 qdm-1.1-1.0.readme
- Step 6** As directed by the instructions on the web page, select the CCO server from which you want to download the readme file. Cisco Systems recommends reading the contents of the readme file before performing the QDM installation.
- Step 7** After reading the readme file, hit the back button on your web browser twice, or return to the QDM software download page at:  
<http://www.cisco.com/cgi-bin/tablebuild.pl/qdm>
- Step 8** Click the QDM tar file (qdm-1.1-1.0.tar).
- Step 9** As directed by the instructions on the web page, select the CCO server from which you want to download the tar file. Click your selected server.
- Step 10** Save the qdm-1.1-1.0.tar file onto a TFTP server.
- Step 11** Extract the QDM archive by issuing the **archive tar** command:

```
Router# archive tar /xtract tftp://<path>/qdm1.1-1.0.tar slot0:
Loading <path>/qdm.tar from a.b.c.d (via Interface1/0):!
extracting qosmon.jar (xxxxxx bytes)!!!!!!!CCCCCCCC
extracting HealthPanel.jar (xxxxxx bytes)!!!!CCCCCCC
. (directory) -- unable to create (Invalid argument)
extracting ./QOS.html (xxxx bytes)!
extracting ./buffer.html (xxx bytes)
extracting ./cfgprotdisc.html (xxx bytes)
extracting ./class.html (xxx bytes)!
extracting ./cli.html (xxx bytes)
extracting ./empty.html (xxx bytes)
extracting ./grint.html (xxx bytes)
...
[OK - 884736/1769472 bytes]
```

**Note**

In this example, <path> refers to the path where the QDM tar file is located. The example also assumes that the file is saved under the name default file name, qdm1.0-1.0.tar. If the tar file is saved under a different name, replace the qdm1.1-1.0.tar portion of the archive command with the new file name.

QDM 1.1 is now installed on your router. To enable QDM, proceed to the next section, “Enabling QDM”.



## Enabling QDM

**Step 1** Verify that the HTTP Web server is running by using the **show running-configuration** command:

```
Router# show running-configuration
```

- If the following line is in the command output, then the HTTP Web server is running:  
ip http server
- If the above line does not appear in the command output, use the following commands to enable the HTTP Web server:

```
Router% enable
Enter password: xxxxxx
Router# configure terminal
Enter configuration command, one per line. End with CNTL-Z
Router# ip http server
```

- If you want to save the new configuration, enter the **copy running-config startup-config** command to save the changes to NVRAM. If you do not enter the **copy running-config startup-config** command, the configuration changes are lost when your router reboots.

```
Router# copy running-config startup-config
```

**Step 2** The default authentication mode for QDM is enable mode. If you wish to change the authentication mode, you should do so now.

For information on changing the authentication mode, see the “Choosing an Authentication Mode” section on page 12. For additional information on QDM, see the online help information within the QDM application.

## Launching QDM

To launch QDM, open a supported Web browser and enter one of the following URLs:

- To access QDM as a Monitor User, enter the following URL: `http://<IP address>/level/1/go/qdm`
- To access QDM as an Administrative User, enter the following URL:  
`http://<IP address>/level/15/go/qdm`

The IP address could be any IP address configured on your router. If your router hostname is in the Domain Name System (DNS), you can use the router name instead of the IP address.

For example, if your router hostname in DNS is charlie and your domain name is anydomain, you can access QDM as a Monitor User by entering the following URL:

```
http://charlie.anydomain.com/level/1/go/qdm
```


For information on Monitor and Administrative users, see the “Creating a QDM User Profile” section on page 12.

**Note**

When you enter the `http://<IP address>/level/<security level>/go/qdm` URL, the HTTP server looks for QDM in the four Flash file systems in the following order: slot0, slot1, disk0, then disk1. This order becomes important when QDM is installed on two different Flash file systems. When a version of QDM exists on both slot1 and disk0, for instance, QDM will always be loaded from slot0, even if disk0 contains a newer version of QDM.

After you enter one of these URLs, the following screen should appear:

*Figure 1 QDM Verification Screen*

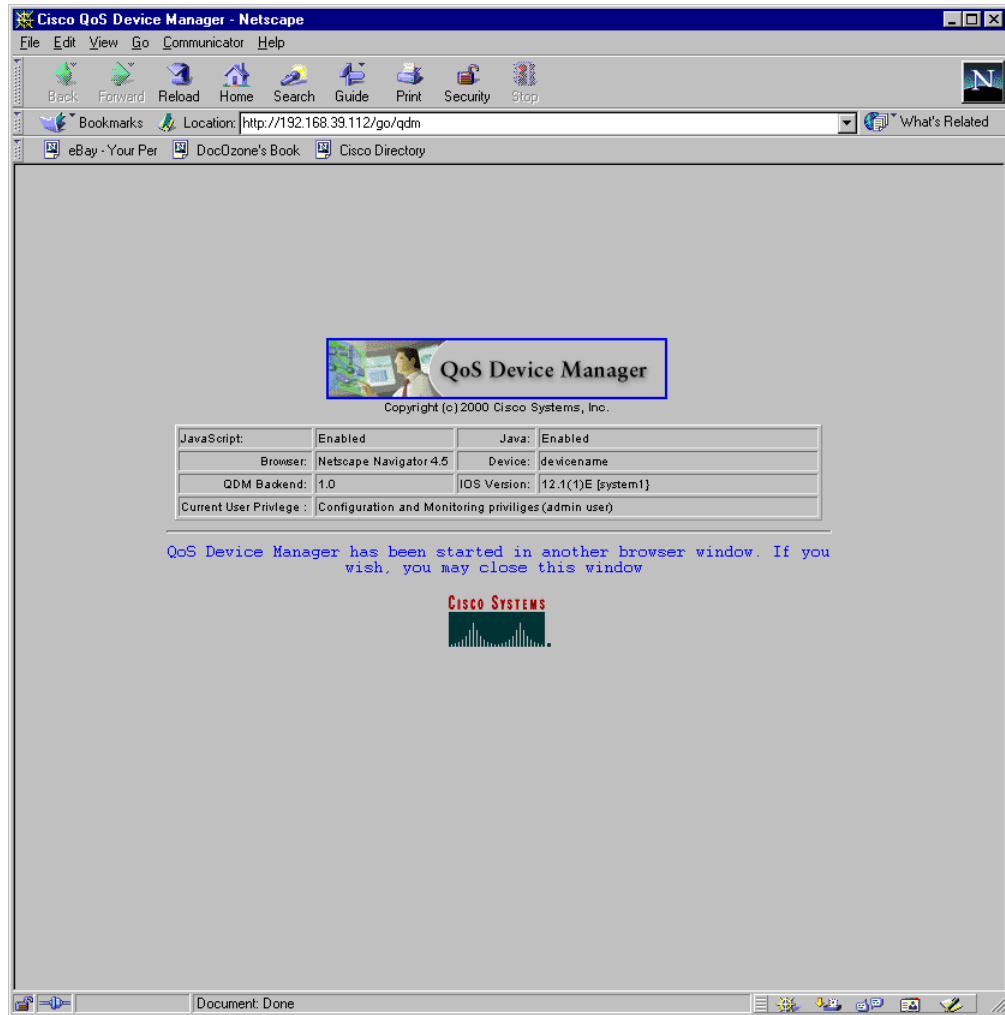

The QDM application should appear in a separate browser window. The QDM application should be similar in appearance to Figure 2:

**Figure 2** QDM Application Screen



QDM is now successfully launched on your router. For additional information on QDM, see the online help information within the application.

## Logging Out of QDM

To log out of QDM, exit and close all browser windows that might be open. For Netscape Navigator browsers, use the Exit option under the File menu. For Microsoft Internet Explorer browsers, use the Close option under the File menu.

You can also log out of QDM by clicking the logout option in the top right corner of the QDM application, or by simply exiting the web browser running the QDM application.



**Note**

Clicking the logout option closes the browser window where the QDM application was running. To insure a complete logout, close all web browser windows.

## Choosing an Authentication Mode

The Cisco IOS HTTP Web server supports three authentication modes:

### 1. Enable Password mode

In Enable Password mode, an enable password is used to authenticate QDM Web browser clients. Enable Password mode is the default authentication mode.

When you use QDM in Enable Password mode, leave the UserName field in the Authentication dialog box empty and specify your enable password in the Password field.

If the router does not have a configured Enable password, the authentication dialog box does not appear.

If you want to switch to Enable Password mode, enter the following commands:

```
Router# configure terminal
Enter configuration commands, one per line.
Router(config)# ip http authentication enable
```

For information on configuring a User Profile in Enable Password mode, see the “Creating QDM User Profiles in Enable Password Mode” section on page 14.

### 2. Local mode

In Local mode, usernames and passwords are created locally on the router and are used to authenticate QDM clients. If Local mode is in use, simply enter the desired username and password pair in the authentication dialog.

When you operate QDM in Local mode, a username and password pair must have a privilege level of 15 to change configurations.

If you want to switch to Local mode, enter the following commands:

```
Router# configure terminal
Enter configuration commands, one per line.
Router(config)# ip http authentication local
```

For information on configuring a User Profile in Enable Password mode, see the “Creating QDM User Profiles in Local Authentication Mode” section on page 13.

### 3. Terminal Access Controller Access Control System (TACACS) mode

In TACACS, when a user asks to log in to a terminal server or a router, the device asks for a user login name and password. The device then sends a request for validation to the TACACS server in its configuration. The server validates the login and password pair with a TACACS password file. If the name and the password are validated, the user is logged on.

If you want to switch to TACACS mode, enter the following commands:

```
Router# configure terminal
Enter configuration commands, one per line.
Router(config)# ip http authentication tacacs
```

## Creating a QDM User Profile

This section contains the following topics:

- QDM User Profiles Overview
- Creating QDM User Profiles in Local Authentication Mode
- Creating QDM User Profiles in Enable Password Mode

## QDM User Profiles Overview

QDM 1.1 supports two types of user profiles, an Administrative User and a Monitor User. QDM Administrative Users can monitor and make configuration changes to a device. QDM Local Users can monitor a device using QDM, but are unable to make configuration changes to a device using QDM.

## Creating QDM User Profiles in Local Authentication Mode

- Step 1** Verify that the authentication mode of the Cisco IOS Web server is set to Local mode. To verify this authentication mode, enter the **show running-config** command in EXEC mode and look for the following line in the command output:

```
ip http authentication local
```

If you want to authenticate QDM in Local Authentication mode but Local Authentication mode is not configured on your Cisco IOS Web server, see the “Choosing an Authentication Mode” section on page 12 of this document.

- Step 2** Use the **username** configuration command to create a user with the desired privilege level. A QDM Administrative User has a privilege level of 15. A QDM Monitor User has a privilege level of 1.



**Note** In QDM, all privilege levels between 1 and 14 are considered Monitor Users. In this document, privilege level 1 is always used to indicate the privilege level of a QDM Monitor User.

In the following example, a QDM Monitor User is created. The login ID of the user is “john” and the password is “doe”, and a privilege level of 1 is specified:

```
Router(config)# username john privilege 1 password 0 doe
```

In this example, a QDM Administrative User with a privilege level of 15 is created. The login ID of the user is “joe” and the password is “montana”:

```
Router(config)# username joe privilege 15 password 0 montana
```



**Note** After logging on as an Administrative User, your password information is cached, preventing you from becoming a Monitor User. To log on to QDM as a Monitor User after logging in as an Administrative User, exit the browser to clear the cached information. When opening the new browser session, log in as a Monitor User. For instructions on exiting your browser, see the “Logging Out of QDM” section on page 11.

## Creating QDM User Profiles in Enable Password Mode

- Step 1** Verify that the authentication mode of the Cisco IOS Web server is set to Enable Password mode. To verify this authentication mode, enter the **show running-config** command in EXEC mode. If no ip http authentication type exists in the output (the output will be in the form ip http authentication <authentication type>), then the authentication type is enable. The ip http authentication type is also enable when the following line appears in the **show running-config** command output:

```
ip http authentication enable
```

If you want to authenticate QDM user profiles in Enable Password mode when enable password mode is not configured on your Cisco IOS web server, see the “Choosing an Authentication Mode” section on page 12.

- Step 2** Use the enable configuration command to create an enable password on the router. In the following example, an enable password is created for an administrative user (privilege level 1):

```
Router(config)# enable secret level 1 0 adminuser1
```



**Note** After logging on as an Administrative User, your password information is cached, preventing you from becoming a Monitor User. To log on to QDM as a Monitor User after logging in as an Administrative User, exit the browser to clear the cached information. When opening the new browser session, log in as a Monitor User.

For instructions on exiting your browser, see the “Logging Out of QDM” section on page 11.



**Note** In most cases, an enable password with a privilege level of 15 already exists on the router. If you already have a router with an enable password and a privilege level of 15, this password can be used for authenticating QDM Administrative Users.

## Disabling QDM

Disabling the Cisco IOS HTTP Web server disables QDM. To disable the Cisco IOS HTTP Web server, use the **no ip http server** command:

```
Router% enable
Enter password:xxxxx
Router# configure terminal
Enter configuration command, one per line. End with CNTL-Z
Router# no ip http server
```

## Deleting QDM

For instructions on uninstalling QDM, see the QDM Uninstall Instructions within the QDM application. These instructions can be retrieved by clicking the following path from the QDM startup screen:

**Help: QDM Uninstall Instructions**

# Caveats

Caveats describe unexpected behavior in QDM. Severity 1 caveats are the most serious caveats; severity 2 and 3 caveats are less serious. All caveats documented in this section are between severity 1 and severity 3.

This section contains open caveats for QDM 1.1.

## Open Caveats—QDM 1.1

This section describes possibly unexpected behavior by QDM 1.1.

### Miscellaneous

- CSCdp73151  
QDM graphs do not interpret input errors as dropped packets.  
There are no known workarounds.
- CSCdp82625  
When QDM is stored on a SanDisk (high density flash card), occasional SanDisk timeout errors might occur. These SanDisk errors can cause HTML pages and GIF's to not load.  
Workaround: Retry the operation that resulted in the timeout.
- CSCdp96802  
The Traffic Policy Configuration Wizard sometimes allows users to select Weighted Random Early Detection (WRED) in a configuration with no selected queueing features. The QDM Wizard will display an error message.  
Workaround: If you have selected WRED without selecting any queueing features, de-select WRED, select the desired queueing features, and re-select WRED.
- CSCdr21604  
The Traffic Policy Configuration Wizard allows users to select a queue limit when Low Latency Queueing is already enabled. The QDM Wizard will display an error message.  
Workaround: Don't select queue limit if Low Latency Queueing is already enabled in the configuration.
- CSCdr21976  
The Traffic Policy Configuration Wizard allows users to choose both a minimum reserved bandwidth feature and the share bandwidth fairly feature for the default traffic class on Cisco 7100 and 7200 series routers. The QDM Wizard will display an error message.  
Workaround: Do not select both the reserve minimum bandwidth and share bandwidth features in the same default traffic class for Cisco 7100 and 7200 series router.
- CSCdr17782  
If a graph is up for an interface that was shutdown, the graph stops updating but does not indicate that the interface was shut down.  
Workaround: Check the interface icon on the status panel (the status tree located on the left side of the main QDM window) to verify that the interface is shut down. If an interface is shut down, the interface icon on the status panel has a red cross.

- CSCds03681  
The history graphs do not operate properly when monitoring nested class maps.  
There is no known workaround.
- CSCds72068  
QDM 1.1 does not operate with Cisco IOS Release 12.1(3a)E and other Cisco IOS Release 12.1E software.  
For information on Cisco IOS software that supports QDM, see the Software Supported section of this document.

## Related Documentation

The following sections describe other sources for documentation available for QDM.

- QDM Product Literature  
The QDM Product Literature page includes the QDM data sheet, Marketing Frequently Asked Questions, Technical Frequently Asked Questions, and other useful QDM information.  
The QDM Product Literature page is available at the following URL:  
<http://www.cisco.com/warp/public/cc/cisco/mkt/enm/qosdm/>
- QDM technical documentation index  
For QDM technical documentation, click the following path on CCO:  
**(Under Service & Support) Technical Documentation: Documentation Home Page: Cisco Product Documentation: Network Management: Quality of Service Device Manager**  
This index is also available at the following URL:  
<http://cisco.com/univercd/cc/td/doc/product/rtrmgmt/qdm/index.htm>

## Limitations and Restrictions

### Unsupported Features in Quality of Service Device Manager 1.1

The following features are not supported by Cisco QDM 1.1:

- Priority queuing (Low Latency Queuing is supported on QDM 1.1)
- Custom queueing
- RSVP
- FRF.12 Support
- Hierarchical policy support
- Generic traffic shaping on non-VIP platforms
- Frame Relay traffic shaping on non-VIP platforms
- Service policies on ATM permanent virtual circuits (PVCs) for Cisco 7100 and Cisco 7200 series routers
- The Quality of Service for Virtual Private Networks (VPNs) feature



# Obtaining Documentation

## World Wide Web

You can access the most current Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

## Documentation CD-ROM

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM is updated monthly. Therefore, it is probably more current than printed documentation. The CD-ROM package is available as a single unit or as an annual subscription.

## Ordering Documentation

Registered CCO users can order the Documentation CD-ROM and other Cisco Product documentation through our online Subscription Services at <http://www.cisco.com/cgi-bin/subcat/kaojump.cgi>.

Nonregistered CCO users can order documentation through a local account representative by calling Cisco's corporate headquarters (California, USA) at 408 526-4000 or, in North America, call 800 553-NETS (6387).

## Obtaining Technical Assistance

Cisco provides Cisco Connection Online (CCO) as a starting point for all technical assistance. Warranty or maintenance contract customers can use the Technical Assistance Center. All customers can submit technical feedback on Cisco documentation using the web, e-mail, a self-addressed stamped response card included in many printed docs, or by sending mail to Cisco.

## Cisco Connection Online

Cisco continues to revolutionize how business is done on the Internet. Cisco Connection Online is the foundation of a suite of interactive, networked services that provides immediate, open access to Cisco information and resources at anytime, from anywhere in the world. This highly integrated Internet application is a powerful, easy-to-use tool for doing business with Cisco.

CCO's broad range of features and services helps customers and partners to streamline business processes and improve productivity. Through CCO, you will find information about Cisco and our networking solutions, services, and programs. In addition, you can resolve technical issues with online support services, download and test software packages, and order Cisco learning materials and merchandise. Valuable online skill assessment, training, and certification programs are also available.

Customers and partners can self-register on CCO to obtain additional personalized information and services. Registered users may order products, check on the status of an order and view benefits specific to their relationships with Cisco.

You can access CCO in the following ways:

- WWW: [www.cisco.com](http://www.cisco.com)
- Telnet: [cco.cisco.com](telnet://cco.cisco.com)
- Modem using standard connection rates and the following terminal settings: VT100 emulation; 8 data bits; no parity; and 1 stop bit.
  - From North America, call 408 526-8070
  - From Europe, call 33 1 64 46 40 82

You can e-mail questions about using CCO to [cco-team@cisco.com](mailto:cco-team@cisco.com).

## Technical Assistance Center

The Cisco Technical Assistance Center (TAC) is available to warranty or maintenance contract customers who need technical assistance with a Cisco product that is under warranty or covered by a maintenance contract.

To display the TAC web site that includes links to technical support information and software upgrades and for requesting TAC support, use [www.cisco.com/techsupport](http://www.cisco.com/techsupport).

To contact TAC by e-mail for QDM-related issues, send an e-mail to [qdm-support@cisco.com](mailto:qdm-support@cisco.com).

To contact TAC by e-mail for other issues, use one of the following:

| Language         | E-mail Address                                                   |
|------------------|------------------------------------------------------------------|
| English          | <a href="mailto:tac@cisco.com">tac@cisco.com</a>                 |
| Hanzi (Chinese)  | <a href="mailto:chinese-tac@cisco.com">chinese-tac@cisco.com</a> |
| Kanji (Japanese) | <a href="mailto:japan-tac@cisco.com">japan-tac@cisco.com</a>     |
| Hangul (Korean)  | <a href="mailto:korea-tac@cisco.com">korea-tac@cisco.com</a>     |
| Spanish          | <a href="mailto:tac@cisco.com">tac@cisco.com</a>                 |
| Thai             | <a href="mailto:thai-tac@cisco.com">thai-tac@cisco.com</a>       |

In North America, TAC can be reached at 800 553-2447 or 408 526-7209. For other telephone numbers and TAC e-mail addresses worldwide, consult the following web site:  
<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>.

## Software Configuration Tips on the Cisco Technical Assistance Center Home Page

If you have a CCO login account, you can access the following URL, which contains links and tips on configuring your Cisco products:

[http://www.cisco.com/kobayashi/technotes/serv\\_tips.shtml](http://www.cisco.com/kobayashi/technotes/serv_tips.shtml)

This URL is subject to change without notice. If it changes, point your Web browser to CCO and click on this path: **Service & Support: Technical Assistance Center: Technical Tips**. You must have a CCO account to access this link.

The following sections are provided from the Technical Tips page:

- Configuration Cookbooks—Contains common configurations or recipes to configure various access routes and dial technologies.
- Field Notices—Notifies you of any critical issues regarding Cisco products and includes problem descriptions, safety or security issues, and hardware defects.
- Frequently Asked Questions—Describes the most frequently asked technical questions about Cisco hardware and software.
- Hardware—Provides technical tips related to specific hardware platforms.
- Hot Tips—Describes popular tips and hints gathered from the Cisco Technical Assistance Center (TAC). Most of these documents are available from the TAC Fax-on-demand service. To reach Fax-on-demand and receive documents at your fax machine from the United States, call 888-50-CISCO (888-502-4726). From international areas, call 415-596-4408.
- Internetworking Features—Lists tips on using Cisco IOS software features and services.
- Sample Configurations—Provides actual configuration examples that are complete with topology and annotations.
- Software Products—Cisco ICM/NAM, Cisco Live!, Cisco IOS Software Bulletins, Cisco TCP/IP Suite 100, General Cisco IOS, Internet/Intranet Appliances and Software, Network Management, Security Technical Tips, WAN Switching Products and Software
- Special Collections—Case Studies, Cisco Standard Icons, References & RFCs, Security Advisories.

## Documentation Feedback

If you are reading Cisco product documentation on the World Wide Web, you can submit technical comments electronically. Click **Feedback** in the toolbar and select **Documentation**. After you complete the form, click **Submit** to send it to Cisco.

You can e-mail your comments to [bug-doc@cisco.com](mailto:bug-doc@cisco.com).

To submit your comments by mail, for your convenience many documents contain a response card behind the front cover. Otherwise, you can mail your comments to the following address:

Cisco Systems, Inc.  
Document Resource Connection  
170 West Tasman Drive  
San Jose, CA 95134-9883

We appreciate and value your comments.

---

Access Registrar, AccessPath, Any to Any, AtmDirector, Browse with Me, CCDA, CCDE, CCDP, CCIE, CCNA, CCNP, CCSI, CD-PAC, the Cisco logo, Cisco Certified Internetwork Expert logo, *CiscoLink*, the Cisco Management Connection logo, the Cisco NetWorks logo, the Cisco Powered Network logo, Cisco Systems Capital, the Cisco Systems Capital logo, Cisco Systems Networking Academy, the Cisco Systems Networking Academy logo, the Cisco Technologies logo, ConnectWay, Fast Step, FireRunner, Follow Me Browsing, FormShare, GigaStack, IGX, Intelligence in the Optical Core, Internet Quotient, IP/VC, Kernel Proxy, MGX, MultiPath Data, MultiPath Voice, Natural Network Viewer, NetSonar, Network Registrar, the Networkers logo, *Packet*, PIX, Point and Click Internetworking, Policy Builder, Precept, ScriptShare, Secure Script, ServiceWay, Shop with Me, SlideCast, SMARTnet, SVX, *The Cell*, TrafficDirector, TransPath, ViewRunner, Virtual Loop Carrier System, Virtual Service Node, Virtual Voice Line, VisionWay, VlanDirector, Voice LAN, WaRP, Wavelength Router, Wavelength Router Protocol, WebViewer, Workgroup Director, and Workgroup Stack are trademarks; Changing the Way We Work, Live, Play, and Learn, Empowering the Internet Generation, The Internet Economy, and The New Internet Economy are service marks; and ASIST, BPX, Catalyst, Cisco, Cisco IOS, the Cisco IOS logo, Cisco Systems, the Cisco Systems logo, the Cisco Systems Cisco Press logo, Enterprise/Solver, EtherChannel, EtherSwitch, FastHub, FastLink, FastPAD, FastSwitch, GeoTel, IOS, IP/TV, IPX, LightStream, LightSwitch, MICA, NetRanger, Post-Routing, Pre-Routing, Registrar, StrataView Plus, Stratm, TeleRouter, and VCO are registered trademarks of Cisco Systems, Inc. or its affiliates in the U.S. and certain other countries. All other trademarks mentioned in this document are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any of its resellers. (9912R)

Copyright © 2000, Cisco Systems, Inc.

